## SERVICE SCHEDULE & PRICING



| Category                | All items marked with a ✓ are completed as part of the service                                                                                                                        | Oil & Filter No timeframe specified From £60 | Interim<br>6,000 miles/<br>6 mths<br>From £110 | Full<br>12,000 miles/<br>12 mths<br>From £180 |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|------------------------------------------------|-----------------------------------------------|
| ENGINE                  | Drain engine oil and refill (special or synthetic oils subject to additional charge)                                                                                                  | 4                                            | <b>√</b>                                       | <b>√</b>                                      |
|                         | 2: Replace oil filter 3: Check for general oil leaks (report any serious leaks)                                                                                                       | <b>√</b>                                     | <b>✓</b>                                       | <b>√</b>                                      |
|                         | 4: Check for timing belt replacement interval & report if due according to mileage/age                                                                                                | ✓                                            | ✓                                              | ✓                                             |
|                         | 5: Check radiator condition, security and report any leaks                                                                                                                            |                                              | <b>√</b>                                       | <b>√</b>                                      |
|                         | <ul><li>6: Check condition of radiator cap</li><li>7: Check coolant hoses for leaks and condition, check securing clips for tightness and report</li></ul>                            |                                              | <b>✓</b>                                       | <b>∀</b>                                      |
|                         | 8: Visually inspect expansion bottle/tank for leaks and cap security                                                                                                                  |                                              | ✓.                                             | ✓.                                            |
|                         | <ul><li>9: Check electric cooling fan for operation where applicable</li><li>10: Check condition and tension of fan / alternator belt, adjust or report on condition</li></ul>        |                                              | <b>√</b>                                       | <b>√</b>                                      |
|                         | 11: Check condition and tension of auxiliary drive belts (excluding timing/cam belt)                                                                                                  |                                              | •                                              | ✓                                             |
|                         | 12: Replace Air Filter                                                                                                                                                                |                                              |                                                | ✓                                             |
|                         | 13: Report if Spark Plugs are due to be changed according to mileage (additional charge for the supply of plugs & fitment)                                                            |                                              |                                                | ✓                                             |
|                         | 14: Check and record antifreeze strength / min temp and top up coolant as required                                                                                                    |                                              | ✓                                              | ✓                                             |
|                         | 15: Replace Spark plugs for petrol engined vehicles only                                                                                                                              |                                              |                                                | 4                                             |
|                         | (extra charge for platinum or long life plugs)  16: Check fuel cap condition                                                                                                          |                                              |                                                | <i>√</i>                                      |
| FUEL                    | 17: Check visual condition of fuel lines                                                                                                                                              |                                              |                                                | <b>✓</b>                                      |
|                         | 18: Replace Diesel fuel filter (if fitted and external from fuel tank)                                                                                                                |                                              |                                                | <b>√</b>                                      |
|                         | <ul><li>19: Replace Petrol fuel filter (if fitted and external from fuel tank)</li><li>20: Check clutch operation for drag/slip/judder/noise and adjust (if applicable)</li></ul>     |                                              | <b>√</b>                                       | <b>√</b>                                      |
| DRIVE                   | 21: Check & Top up clutch fluid (if applicable)                                                                                                                                       |                                              | <b>√</b>                                       | <b>→</b>                                      |
|                         | 22: Check drive shaft gaitors for security and report leaks                                                                                                                           |                                              | ✓.                                             | ✓.                                            |
| DR<br>YS                | 23: Check propshaft / drive shaft/joints and grease nipples where fitted 24: Check and top up axle and/or transaxle oil (if applicable)                                               |                                              | <b>√</b>                                       | <b>√</b>                                      |
| S                       | 25: Top up gear box fluid where applicable and not sealed                                                                                                                             |                                              | •                                              | ✓                                             |
| ELECTRICAL              | 26: Check operation of exterior lights                                                                                                                                                | ✓                                            | ✓                                              | ✓                                             |
|                         | <ul><li>27: Check horn</li><li>28: Check Diesel heater plug indicator operation where fitted</li></ul>                                                                                |                                              | ✓                                              | <b>√</b>                                      |
|                         | 29: Check Battery security /lubricate terminals                                                                                                                                       |                                              | ✓                                              | <b>*</b>                                      |
|                         | 30: Top up Battery/non-sealed units only                                                                                                                                              |                                              |                                                | ✓.                                            |
|                         | 31: Visual inspection of HT leads 32: Check external condition of distributor cap                                                                                                     |                                              |                                                | <b>√</b>                                      |
|                         | 33: Test effectiveness of starter motor                                                                                                                                               |                                              |                                                | <b>*</b>                                      |
|                         | 34: Test alternator charging rate - check security                                                                                                                                    |                                              |                                                | ✓                                             |
| STEERING/<br>SUSPENSION | 35: Check / top-up power steering reservoir (if applicable)                                                                                                                           | ✓                                            | <b>√</b>                                       | 4                                             |
|                         | 36: Check steering / suspension components for wear and corrosion 37: Check steering rack gaitors condition                                                                           |                                              | <b>→</b>                                       | <b>*</b>                                      |
|                         | 38: Check shock absorber condition and report on any serious leaks                                                                                                                    |                                              | ✓.                                             | ✓.                                            |
|                         | 39: Check wheel bearings for excessive play or noise 40: Grease steering / suspension (if applicable)                                                                                 |                                              | ✓                                              | 4                                             |
| EXHAUST                 | 41: Inspect exhaust system inc catalyst if fitted for leaks security and noise                                                                                                        |                                              | ✓                                              | <b>✓</b>                                      |
| EXHAUST                 | 42: Visual check for exhaust smoke (Diesel)                                                                                                                                           |                                              |                                                | ✓.                                            |
| BRAKES                  | 43: Check brake pads for wear or damage 44: Check brake callipers for leaks and security                                                                                              |                                              | <b>√</b>                                       | <b>√</b>                                      |
|                         | 45: Check foot brake shoes for wear or damage                                                                                                                                         |                                              | ✓                                              | <b>✓</b>                                      |
|                         | 46: Inspect operation of wheel cylinders and report any leaks                                                                                                                         |                                              | <b>√</b>                                       | <b>√</b>                                      |
|                         | 47: Visually check brake hydraulic system, pipes and hoses for any leaks, chafing and corrosion 48: Check security of handbrake linkages and travel, lubricate and adjust if required |                                              | <b>✓</b>                                       | <b>√</b>                                      |
|                         | 49: Check Brake discs / drums for wear, cracks, corrosion and scoring/pitting                                                                                                         |                                              | ·<br>✓                                         | <b>√</b>                                      |
|                         | 50: Check Brake Fluid Level & Top Up if required                                                                                                                                      | ✓                                            | ✓                                              | <b>√</b>                                      |
|                         | <ul><li>51: Check Brake Servo Operation</li><li>52: Check ABS warning light for correct operation (if applicable)</li></ul>                                                           |                                              |                                                | <b>√</b>                                      |
|                         | 53: Test and report brake fluid boiling point (if applicable)                                                                                                                         |                                              | ✓                                              | · ✓                                           |
| TYRES/<br>WHEELS        | 54: Remove Road wheels                                                                                                                                                                |                                              |                                                | <b>√</b>                                      |
|                         | 55: Check tyre size and tyre fitted according to side wall instructions 56: Check tyre condition, tread depth, (including spare)                                                      |                                              | <b>√</b>                                       | <b>✓</b>                                      |
|                         | 57: Check and adjust tyre pressures (including spare)                                                                                                                                 |                                              | ✓                                              | ✓                                             |
|                         | 58: Set wheel nut torque to manufacturer's settings                                                                                                                                   |                                              | <b>√</b>                                       | <b>√</b>                                      |
| VISION                  | <ul><li>59: Check wheels for correct balance (including spare if applicable)</li><li>60: Check windscreen wiper condition/operation</li></ul>                                         |                                              | <b>∀</b>                                       | <b>✓</b>                                      |
|                         | 61: Check rear wiper condition/operation (if fitted)                                                                                                                                  |                                              | ✓                                              | ✓                                             |
|                         | 62: Check windscreen washer operations and top up if required                                                                                                                         | ✓                                            | <b>✓</b>                                       | <b>√</b>                                      |
|                         | 63: Check windscreen for chips & cracks 64: Check mirror condition. Interior / Exterior                                                                                               |                                              | <b>∀</b>                                       | <b>✓</b>                                      |
|                         | 65: Check number plate condition                                                                                                                                                      |                                              | ✓                                              | ✓                                             |
| INTERNAL                | 66: Remove and check Pollen Filter Condition, report if replacment required                                                                                                           |                                              |                                                | ✓                                             |
|                         | (supply/fitment at additional cost) 67: Check Seatbelts front and rear inc lap belt                                                                                                   |                                              |                                                | ✓                                             |
|                         | 68: Lubricate accessible door hinges (with white grease)                                                                                                                              |                                              | ✓                                              | ✓                                             |
|                         | 69: Stamp service book (indicating a NSN Service has been carried out)                                                                                                                |                                              | <b>4</b>                                       | <b>√</b>                                      |
| GENERAL                 | 70: Reset vehicle service light where applicable/ subject to data & tooling availability 71: Road test                                                                                |                                              | <b>√</b>                                       | <b>√</b>                                      |
|                         | 71. Road test 72: Lubricate bonnet catch                                                                                                                                              |                                              | •                                              | <b>√</b>                                      |